

FULLY AUTOMATED TRACKING SOLUTION FOR ALL CYTOLOGY SAMPLES

Universal

Compatible with all types of cytology vials for ultimate versatility.

Precision Retrieval

Always access the right sample, every time.

Accelerates Diagnosis

Reduce turnaround time by not spending time searching for vials.



Cytology sample management is a complex and labor intensive process that contributes to diagnostic delays and errors, sample loss, and inefficient allocation of lab resources.

Ewa automates traceability by scanning and tracking samples, eliminating errors, and improving lab efficiency.



Distributed by:
Axlab A/S
+45 35 43 18 81
axlab@axlab.dk
www.axlab.dk

Axlab

YOUR VISION.
OUR INSPIRATION



Example workflow for PAP Smears:



1: Samples arrive to the lab

Molecular testing

Cervical samples are sent to molecular testing (PCR testing).



2: Samples scanned with Ewa

Automatic archiving


All samples are placed in **Ewa** trays and scanned on the system for automatic archiving.



3: Retrieval of +ve samples using Ewa

Fast retrieval

Positive HPV samples are retrieved through **Ewa** and sent for cytology testing.

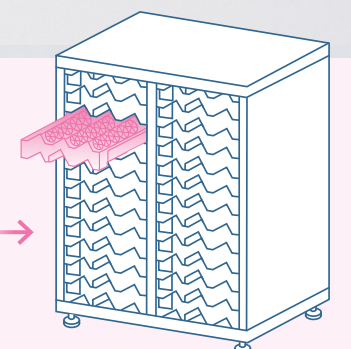

4: Samples are kept ~a few weeks

Precise disposal

Precise and simplified disposal of samples with automated search.